primus

SALES GUIDE MOP WASH SOLUTION for Soft Mounted Washer Extractors



199,9999 % reduction of Escherichia coli K12 NCTC 16538, Sephylococcus aureus ATCC 6538, Selmonella enterica ATCC 3076, Candida albicans ATCC 1021 Appropriate ATCS 1076 (and to albicans ATCC 1021 Appropriate ATCS 1076). Tel 1540 in the mop washing program "Mop washing program for main wash temperature 40° C" with "Eltra 40 extra" laundry detergent and a load size of 7.5 Kg - investigation MB 1880/19 dated April 16, 2020 conducted by wfk-institut für Angewandte Forschung GmbH commissioned by Alliance Laundry CE s.r.o..







Blue version of Mop logo

ilitari, i

Mop Wash - Overview

- Product category: CZ softmounts
- Capacities: 65 80 105 135 240 280 L
- Specialty: 9 special mop wash programs (+20 standard pre-set)
- Extra logo: Yes
- Extra accessory available*: Dirt collector v1.0 (behind) / Dirt collector v2.0 (under)
- Limited load ratio for washing mop heads



Mop Wash - Package

- Approvals: CE; CE+EAC; CE+Watermark; CE+WRAS; No certification
- Actuation: OPL only
- Control: XControl FLEX PLUS
- Heating: All available
- Voltage: All available
- G factor: 400G only
- Water & drain: 2x water inlets and 1x drain (only)
- Extra standard: USB + RS485 plug on rear panel
- Drum perforation: 3,5mm only (standard perforation)



Programs

- 20 standard pre-set programs + 9 tailored to mop heads wash (2 tested by WFK, 1 according to RKI)
- Mop programs created in collaboration with experts on mop segment with 8 years of experience
- Focused on high wash quality
- Covering from new mop heads wash, through light soiled ones up to disinfection cycles (following RKI (Robert Koch Institute) standards)
- 2 programs tested and certified by WFK
- ► Mop Disinfection 60°C
- ▶ Mop Disinfection 40°C

- Functions with default ON:
- Wait for temperature
- Heating 100% time
- Cool down



Programs

	POSITION	NAME	TEMP	DESCRIPTION	PRE-WASH	MAIN WASH	RINSES	WFK TEST	CONSUMPTION	TOTAL TIME
	#1	New Mop / Rags 90°C	90°C	Short wash for new mop heads before first use		10 min	2x			
	#2	Mop Normal 60°C	60°C	Light soiled mop heads and rags	1x	15 min	2x			
	#3	Mop Intensive 60°C	60°C	Heavier soiled mop heads and rags	2x	20 min	2x			
ADJ >	#4	Mop Desinfection 60°C	63°C	Thermo disinfection	2x	20 min	2x	x	80,7 L/cycle 3,31 kWh	95 min
	#5	Mop Normal 40°C	40°C	Light soiled mop heads and rags	1x	15 min	2x			
	#6	Mop Intensive 40°C	40°C	Heavier soiled mop heads and rags	2x	20 min	2x			
ADJ >	#7	Mop Desinfection 40°C	43°C	Thermo disinfection	2x	20 min	2x	x	80,5 L/cycle 1,84 kWh	81,75 min
NEW >	#8	RKI 60°C	63°C	Program following RKI standards		20 min	2x			
NEW >	#9	Wash Off	40°C	Clean off the drum		4,5 min				



								mb.
Mop 140 g Micro 6 pcs / kg	840 g / kg		M	op load max	X		Water r	nain wash
Cotton 5 pcs / kg	0 0	STD cap	= > pcs	=> g	=> kg		ratio 1:5	water level
	FX65	6,5	39	5460	5,46	->	27,3	19
	FX80	7,5	45	6300	6,3	->	31,5	20
	FX105	10,5	63	8820	8,82	->	44,1	24
	FX135	13,5	81	11340	11,34	->	56,7	24-25
MAX	FX180	18	108	15120	15,12	->	75,6	29
(theoretical)	FX240	24	144	20160	20,16	->	100,8	29
	FX280	28	168	23520	23,52	->	117,6	30
	FX65	6,5	39	5460	5,46	->	27,3	19
	FX80	7,5	45	6300	6,3	->	31,5	20
	FX105	10,5	63	8820	8,82	->	44,1	24
CALCULATION	FX135	13,5	81	11340	11,34	->	56,7	25
(max water level limits)	FX180	18	89,28571	12500	12,5	->	62,5	25
	FX240	24	118,5714	16600	16,6	->	83	(25)
	FX280	28	128,5714	18000	18	->	90	25
	FX65	6,5	39	5460	5,46	->	27,3	19
	FX80	7,5	45	6300	6,3	->	31,5	20
FINAL	FX105	10,5	63	8820	8,82	->	44,1	24
(with max real load)	FX135	13,5	81	11340	11,34	->	56,7	25
	FX180	18	90	12500	12,5	->	62,5	25
	FX240	24	118	16600	16,6	->	83	25
	FX280	28	128	18000	18	->	90	25

Water Level & Max Load

Water level shouldn't reach so high water level -> reduction to max 25 (followed by reduced max allowed load of mop heads)

Max Load					
39 pcs	5,5 kg				
45 pcs	6,3 kg				
63 pcs	8,8 kg				
81 pcs	11,3 kg				
90 pcs	12,5 kg				
118 pcs	16,6 kg				
128 pcs	18,0 kg				



Capacity – Comparison

(in pieces)	Electrolux*	Miele**	Primus (acc 140g)
FX65	43	33 / 54	39
FX80	50	42 / 66	45
FX105	70	53 / 80	63
FX135	85	68 / 100	81
FX180	120	84 / 130 (16kg)	90
FX240	160	126 / 200	118
FX280	200 (30kg)	168 / 260 (32kg)	128

(in pieces)	Electrolux	Primus	Diff
FX65	43 * 100 = 4.300 = 4,3 kg	39 * 140 = 5.460 = 5,5 kg	+ 1,2 kg (+28%)
FX80	50 * 100 = 5.000 = 5,0 kg	45 * 140 = 6.300 = 6,3 kg	+ 1,3 kg (+26%)
FX105	70 * 100 = 7.000 = 7,0 kg	63 * 140 = 8.820 = 8,8 kg	+ 1,8 kg (+26%)
FX135	85 * 100 = 8.500 = 8,5 kg	81 * 140 = 11.340 = 11,3 kg	+ 2,8 kg (+ 33%)
FX180	120 * 100 = 12.000 = 12,0 kg	90 * 140 = 12.600 = 12,6 kg	+ 0,6 kg (+ 5%)
FX240	160 * 100 = 16.000 = 16,0 kg	118 * 140 = 16.520 = 16,5 kg	+ 0,5 kg (+ 3%)
FX280	200 (30kg) * 100 = 20.000 = 20,0 kg	128 * 140 = 17.920 = 17,9 kg	

^{*} Max capacity - dry weight of mop head 100g, load ratio 1:15

^{**} For cotton 40cm / microfibre 40cm



WFK Test

Tested machines: FX80 (version Mop 2.0 incl. integrated dirt collector in base frame)

Conditions:

Test leg	Test machine	Dosage powder laundry detergent	Washing program	Load composition	Loading capacity/number of washes
1	FX80 8kg	8 g/l Eltra 40 Extra (Ecolab)	Mop washing program for main wash temperature 40 °C	51 flat washmops + biomonitors + 8 wfk-SBL 2004	7.5 kg / 3 wash cycles
2	(20 lb)	6 g/l Mop Eltra (Ecolab)	Mop washing program for main wash temperature 60 °C	51 flat washmops + biomonitors + 8 wfk-SBL 2004	7.5 kg / 3 wash cycles



199,9999 % reduction of Escherichia coli K12 NCTC 10538, Staphylococcus aureus ATCC 6538, Salmonella enterica ATCC 13076, Candida albicans ATCC 10231, Aspergillus brasiliensis ATCC 16404 in the mop washing program "Mop washing program for main wash temperature 40° C" with "Eltra 40 extra" laundry detergent and a load size of 7.5 kg - investigation MB 1880/19 dated April 16, 2020 conducted by wfk-Institut für Angewandte Forschung GmbH commissioned by Alliance Laundry CE s.ro..

Tested mop type: Vermop Art.-Nr. 4940 SPRINT PLUS BASIC


Test organisms

- Escherichia coli (E. coli K12 NTC 10538)
- Staphylococcus aureus (S. aureus ATCC 6538)
- Salmonella enterica (S. enterica TCC 13076)
- Candida albicans (C.albicans ATCC 10231)
- Aspergillus brasiliensis (A. brasiliensis ATCC 16404)



WFK Test

Result*: Achieved perfect germ reduction result >99,9999% for both tested wash programs (Mop disinfection 60°C & Mop disinfection 40°C)

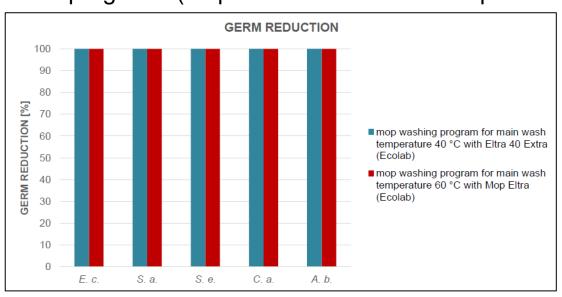



199,999 % reduction of Escherichia coli K12 NCTC 10538, Staphylococcus aureus ATCC 6538, Salmonella enterica ATCC 13076, Candida albicans ATCC 10231, Aspergillus brasiliensis ATCC 16404 in the mop washing program "Mop washing program for main wash temperature 40° C" with "Eltra 40 extra" laundry detergent and a load size of 7.5 kg - investigation MB 1880/19 dated April 16, 2020 conducted by wfk-institut für Angewandte Forschung GmbH commissioned by Alliance Laundry CE s.ro..

E.c. = Escherichia coli (E. coli K12 NTC 10538)

S.a. = Staphylococcus aureus (S. aureus ATCC 6538)

S.e. = Salmonella enterica (S. enterica ATCC 13076)

C.a. = Candida albicans (C.albicans ATCC 10231)

A.b.= Aspergillus brasiliensis (A. brasiliensis ATCC 16404)

* The results are only valid for the investigated products or procedures and their qualities at the time of the investigation as well as for the adjusted test conditions as ordered






Dirt Collector 1.0

- Optionally can be requested dirt collector behind machines
- To combine with the collector it's required a base frame (200 mm height) than can be ordered

Base frame part numbers:	Dirt collector part numbers:		
For 65L = 551901 For 80L = 547716	For 65-80L = 570845		
For 105L = 547725 For 135L = 547734	For 105-135L = 570846		
For 180L = 551935 For 240L = 551950 For 280L = 553569	For 180-280L = 570847		

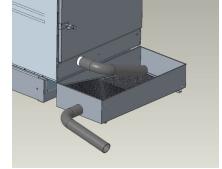





Dirt Collector 1.0 - details

Material: AISI 304


• Filter: Removable with 2 different dimensions of perforation


For capacity 65-80 L:

Dimensions: 203 x 710 x 303 mm (HxWxD)








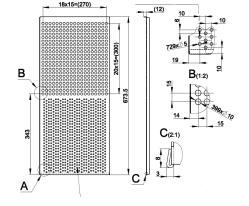

For capacity 105-135 L:

Dimensions: 203 x 795 x 452 mm (HxWxD)






(drawings for 65-80L)





Dirt Collector 1.0 (detailed dims)

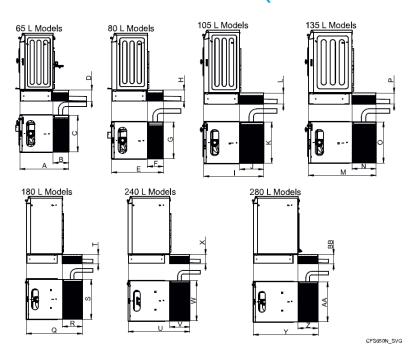


Specification	in. [mm]
A	37.40 [950]
В	12.09 [307]
С	27.95 [710]
D	8.43 [214]
Е	39.37 [1000]
F	12.09 [307]
G	27.95 [710]
н	8.43 [214]
I	45.63 [1159]
1	18.39 [467]
К	31.30 [795]
L	8.43 [214]
M	51.54 [1309]
N	18.39 [467]
0	31.30 [795]
P	8.43 [214]
Q	53.43 [1357]
R	19.09 [485]
s	38.19 [970]
Т	8.98 [228]
U	58.74 [1492]
v	19.09 [485]
w	38.19 [970]
x	8.98 [228]
Y	61.69 [1567]
z	19.09 [485]
AA	38.19 [970]
ВВ	8.98 [228]



Dirt Collector 2.0









PART NUMBER	DESCRIPTION
574827	For 65L machines – inox
574828	For 80L machines – inox
574829	For 105L machines – inox
574830	For 135L machines – inox
574831	For 180L machines – inox
574832	For 240L machines – inox
574833	For 280L machines – inox

Dirt collectors will be available only via Accessories Part number valid for all available brands



Dirt Collector 2.0 (detailed dims)

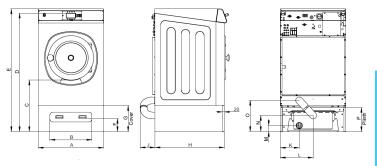

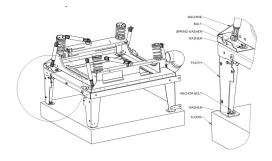


	6.5kg/		10.5kg/	13.5kg	18kg /	24kg /	28kg /
	14lb./	20lb.	25lb./	/ 30lb.	40lb. /	55lb. /	70lb. /
	65L	/80L	105L	/135L	180L	240L	280 L
	(mm)	(mm)	(mm)	(mm)	(mm)	(mm)	(mm)
Α	710	710	795	795	970	970	970
В	416	416	510	510	640	640	640
С	650	650	642	642	777	777	777
D	1358	1358	1468	1468	1654	1654	1654
E	1414	1414	1524	1524	1710	1710	1710
F				162	162	162	162
G				323	323	323	323
H	642	692	692	840	869	1004	1079
1	258	209	289	180	275	180	180
J	230	230	230	230	270	270	270
K	355	355	398	398	485	485	485
L	76	76	76	76	76	76	76
M	200	200	200	200	200	200	200
N	388	388	388	388	408	408	408
O	299	299	299	299	300	300	300





General Overview

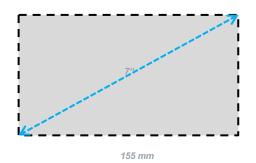



Control size	7" diagonal	(12,9% larger than iPhone 12) (12,6% smaller than iPad mini 5)
Resolution	1024 x 600 (WSVGA)	(H:V ratio 15:9)
Luminance (brightness)	1000 nit (cd/m²)	(625 cd/m² on iPhone 12) (870 cd/m² on Samsung S21 Plus)
Colors	+16 million colors	(equal to Samsung S21-series)
Viewing angle	180° viewing angle	(High viewing angle for perfect readability)
Communication	USB, RS485, WiFi	
Energy savings	Screensaver mode	
Chemical resistance	Passed over 25 selected chemical substances	(Coffee, Juice, Acetone, Gasoline, Vinegar,)



Comparison Button vs Touch





Commercial name	"Button" generation	"Touch" generation
Display	5" monochrome	7" touch & swipe
Colors	Blue & white	16 milion
Program memory	99	99
Program change	All fully programmable	All fully programmable
Languages	21	34
Connectivity	USB / RS485	Wireless / RS485 / USB
Network	Local	Cloud / Local
Updates	Via USB	OTA** / USB
Manual weighing system	✓	✓ (Q1/2022)
Automatic weighing system by weigh.cells	✓	✓ (Q1/2022)
Traceability	✓	✓
Count-up timer		~
Delayed start	✓	✓
Batch number	(w/ SoapLink)	✓
SoapLink communication	✓	✓ (Q1/2022)
Banners		✓ (TBD)
QR codes		✓ (TBD)
Water leakage detection		✓ (TBD)

^{**} OTA = Over the Air



Comparison: competitors













	ALS	Electrolux	Onnera	Girbau	Imesa	Tolon
Control type	MC10 generation	Clarus Control	Touch Plus	Inteli	IM11	
Display	7" Touch	Monochrome	7" Touch	Monochrome	7" Touch	7" LCD
Programs	20 pre-set 99 memory	Up to 192	29 pre-set Indefinite	20 pre-set 99 memory	Unlimited	16 pre-set 99 memory
Plug	USB RS485	Memory card	USB	Memory card		USB
WiFi	Yes		Yes		Yes	
External dosing	8 + 8	8+5		12	11	



Languages

34 available languages as standard

- 7 new languages for selection
- Chinese, Japanese and Korean language no longer in separate software version
- Slovak and Bulgarian now also fully translated in advanance & service menu

Better market fit and customer interaction

	Hungarian	Romanian
Bulgarian	Indonesian	Russian
Chinese (Simplified)	Italian	Slovak
Chinese (Traditional)	Japanese (Standard)	Slovenian
Croatian	Korean	Spanish (European)
Czech	Latvian	Spanish (Columbian)
∷ Danish	Lithuanian	Swedish
Dutch	Malaysian	= Thai
± Finnish	■ Norwegian	Turkish
French	Polish	Vietnamese
German	Portuguese (European)	
■ Greek	Portuguese (Brazilian)	


New compared to Xcontrol+ ("button" version)



Navigation




Approach screen

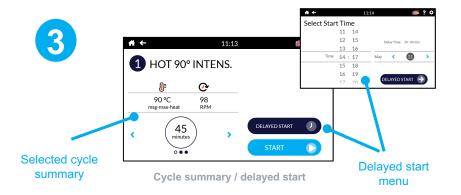





Program selection

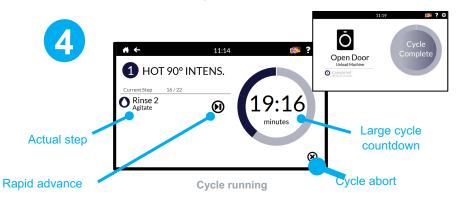

primus